


16 TON PIPE BENDER

USER MANUAL

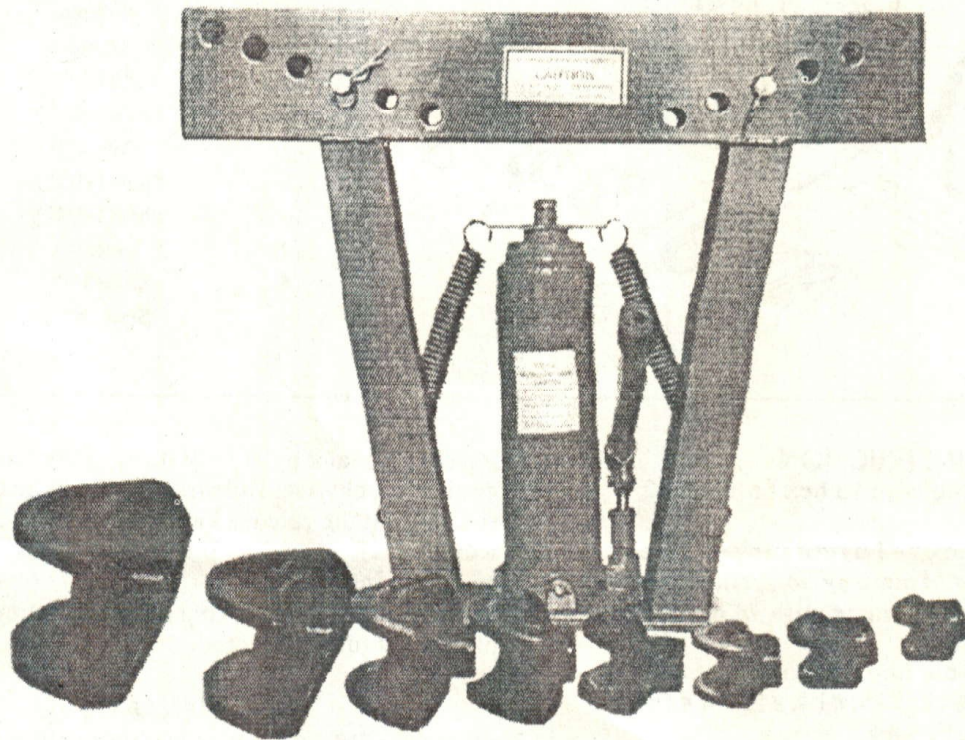

- **SAFE WORKING LOAD:16,000KG**
- **READ RULES FOR SAFE OPERATION AND INSTRUCTION BEFORE USAGE**
- **USE ONLY ON HARD AND LEVEL SURFACE**
- **USE OF A GOOD GRADE OF HYDRAULIC OIL IS RECOMMENDED.**
- **DO NOT GET UNDER A VEHICLE THAT IS ONLY SUPPORTED BY A JACK.**
- **USER SUPPORT STAND**